

← SEE NEXT PAGE

Distributors in the United States and Canada provide a standard Limited Warranty for 6 months from the date of purchase for new products. If you're not located in the United States or Canada, please contact your local distributor for warranty arrangements in your territory. Please visit [www.seadooseascooter.com](http://www.seadooseascooter.com) for distributor/Service Centre details. Distributors ONLY warrant Stallion products purchased from an authorized dealer.

**ALWAYS ACTIVATE YOUR WARRANTY IMMEDIATELY ON**  
<http://www.seadooseascooter.com/warranty.html>

*Distributors ONLY warrant products with an active  
Warranty Registration*


## WARRANTY & CUSTOMER SERVICE INFORMATION

[www.seadooseascooter.com](http://www.seadooseascooter.com)



SEA-DOO® SEASCOOTER™

Model no. ZS08 / SD75001

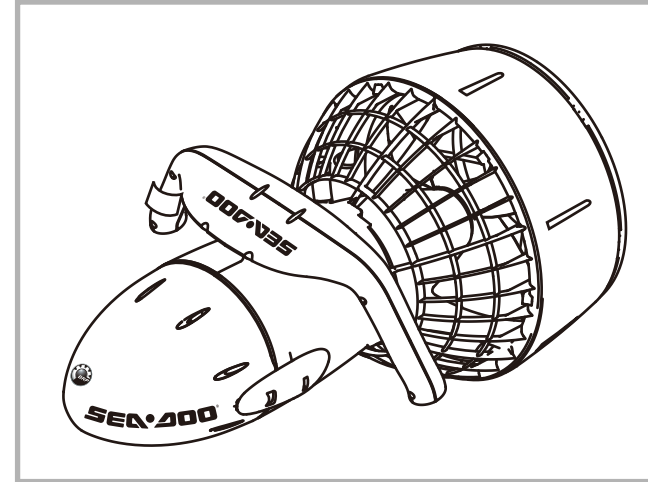

### CAUTION

**ELECTRICALLY OPERATED PRODUCT**  
Not recommended for children under 16 years of age. As with all electrical products, precautions should be observed during handling and used to reduce the risk of electric shock.

SDP95003

## Contents

Introduction	1
Parts diagram	2
WARNINGS	3
Getting started	5
Battery use	9
Care & Maintenance	19
Trouble Shooting	21
Technical Specifications	26


## Instruction

Thank you for having chosen the SEA-DOO® SEASCOOTER™ - with the SEASCOOTER™ swimming, snorkeling and diving is effortless and fun.

Years of design and engineering have resulted in a personal water propeller that gives you power - up to 2 mph/3km/h for up to 40 minutes of use with a standard battery - but at the same time is compact and light.

There are many features incorporated in this sophisticated design, please take a little time to study the manual to learn about them all to get the most out of your SEASCOOTER™.

## Parts Diagram

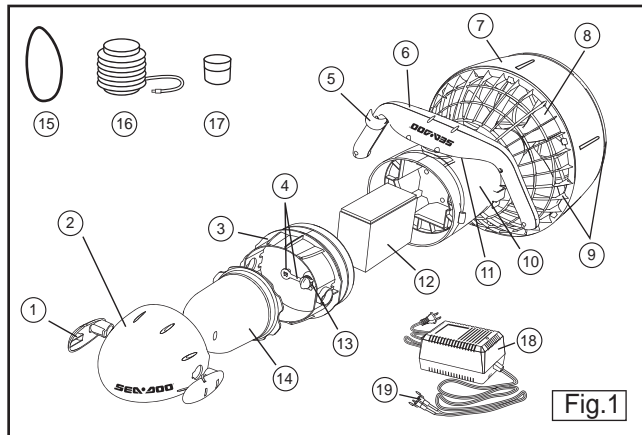

- |                      |                            |
|----------------------|----------------------------|
| ① Latch              | ⑪ Master Switch            |
| ② Nose Cone          | ⑫ Battery                  |
| ③ Inner Nose Cone    | ⑬ Vent Hole                |
| ④ Vent Plug          | ⑭ Buoyancy Control Chamber |
| ⑤ Trigger            | ⑮ Silicone Ring            |
| ⑥ Handle             | ⑯ Pump                     |
| ⑦ Nozzle             | ⑰ Lubricant                |
| ⑧ Propeller          | ⑱ Charger                  |
| ⑨ Protective Grilles | ⑲ Charger Jack             |
| ⑩ Battery Housing    |                            |

2

## WARNINGS

- Read the user's manual carefully.
- Never remove the grilles except for maintenance.
- Never stick body parts, clothing or other objects in the vicinity of the Propeller. Do not wear loose or flowing clothing or equipment that could be drawn into the Propeller.
- Particular care should be exercised when using the SEASCOOTER™ near anybody with long hair. Users with long hair should tie it up or wear a swimming cap when using the SEASCOOTER™.
- Always inspect the swimming area to ensure it is free of hazards or obstacles such as boats and swimmers before using the SEASCOOTER™.
- Always charge battery to its fullest before using the SEASCOOTER™. After charging is complete the battery will continue to off gas. Wait at least 30 minutes after charging before removing the battery from the charger or placing the battery into the battery housing. Failure to do so could result in an explosion.
- Ensure sufficient battery charge remains for return to shore or surface.
- The Seascooter™ is not a personal floatation device - always wear a Approved Personal Flotation Device / Approved Life-Preserver when using the Seascooter™ for snorkeling.
- Be aware of appropriate water levels, tidal changes, dangerous currents, weather changes and strong offshore winds. Always scout unfamiliar water.

3

## Getting Started

- Do not use alcohol or mind-altering drugs prior to using this product.
- ALWAYS keep the SEA-DOO® SEASCOOTER™ out of direct sunlight when not in use. HEAT KILLS BATTERIES.
- When using the SEA-DOO® SEASCOOTER™ for SCUBA, ascents and descents should be made in accordance with recognized diving practices.
- The SEA-DOO® SEASCOOTER™ should only be used for SCUBA by qualified divers.
- Always follow this age recommendation: a child under 16 years old should never operate this SEA-DOO® SEASCOOTER™.
- Never open the Cover of the SEA-DOO® SEASCOOTER™ in the water.
- When not in use, always turn the Master Switch to the off position.
- Do not use the SEASCOOTER™ below the recommended maximum depth of 20m/65ft.
- ALWAYS remove the battery from the unit when not in use.
- DO NOT store the battery in the unit

4

When you buy the SEA-DOO® SEASCOOTER™ the battery is disconnected and needs to be charged. Follow the safety cautions on pages 9 to 12 and charging instructions on pages 13 to 16.

### ***Using the SEASCOOTER™ for swimming and snorkeling.***

When swimming or snorkelling the SEA-DOO® SEASCOOTER™ should be kept positively buoyant - this is done by simply making sure the Buoyancy Chamber is empty and fitted inside the Nose Cone.

To use the SEASCOOTER™ for swimming or snorkeling follow these instructions.

1. Charge the battery and install just before use.
2. Make sure that Vent Plug is closed.
3. Place the SEA-DOO® SEASCOOTER™ into the water so the Handle, Outer Nose Cone and Nozzle fill with water.
4. When ready to set off, switch the Master Switch to the On position shown in figure 2.
5. Pull and hold both Triggers to start the Propeller. (There is a short delay before the Propeller begins to rotate).
6. To stop the Propeller, simply release the Trigger.
7. Always turn the Master Switch off when out of the water.

5

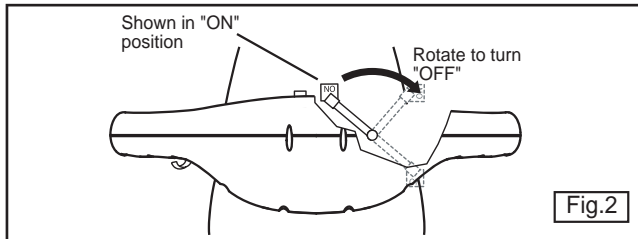


Fig.2

8. Proper posture when using the SEA-DOO® SEASCOOTER™ is important to achieve the maximum speed - see figure 3 for the correct position of the SEA-DOO® SEASCOOTER™ when using it.

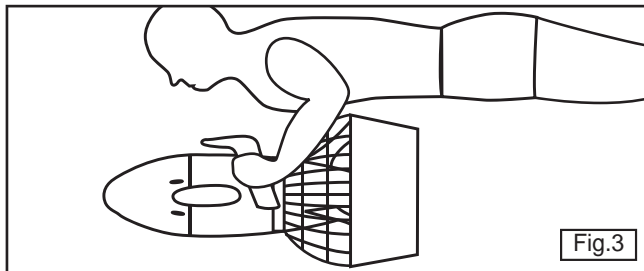


Fig.3

**CAUTION**

Do not dive deeper than you would normally when snorkeling, to ensure you can get back to the surface safely.

6

**Using the SEA-DOO® SEASCOOTER™ for diving - adjusting the buoyancy.**

Your SEASCOOTER™ can be used for diving up to 20m/65ft but will need to be adjusted for neutral buoyancy. The SEASCOOTER™ must never be adjusted for negative buoyancy to avoid it sinking if accidentally released.

To adjust for neutral buoyancy follow these instructions

1. Make sure the SEA-DOO® SEASCOOTER™ is in the Off position.
2. Remove the SEASCOOTER™ from the water, give a half turn to the Latches, remove them (see figure 4) and remove the Buoyancy Control Chamber.


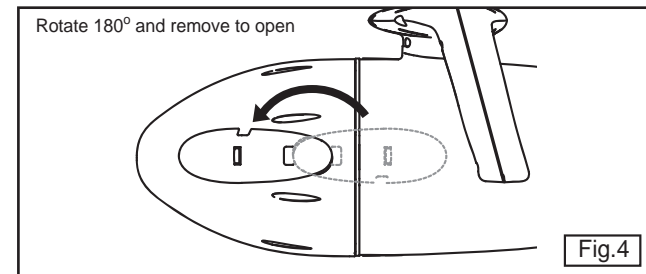


Fig.4

3. Replace the Outer Nose Cone and Latches.
4. Place the SEA-DOO® SEASCOOTER™ in the water to fill the nozzle, handle and Outer Nose Cone with water.

7

5. Remove the lid from the Buoyancy Control Chamber and place the upturned chamber on the Handle as show in figure 5.

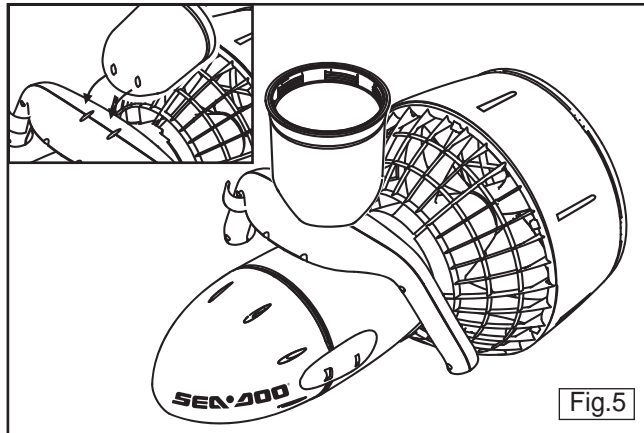

6. Adjust the buoyancy by adding weight and replace the lid of the Buoyancy Chamber making sure the seal is free from sand.
7. Remove the SEASCOOTER™ from the water, remove the Outer Nose Cone again, replace the Buoyancy Chamber, replace the Outer Nose Cone and close with the Latches.

#### CAUTION

If the SEASCOOTER™ is later used for swimming or snorkeling be sure to remove the weight from the Buoyancy Chamber so the SEA-DOO® SEASCOOTER™ has positive buoyancy.

## Battery Use



## Battery Use

### CAUTION

- Your SEA-DOO® SEASCOOTER™ is supplied with a battery that needs to be treated carefully as it will release potentially explosive gases during its normal cycle of use (off gassing). Please read the entire manual thoroughly and follow all instructions. Failure to do so can result in an explosion occurring.
- Always remove the battery from your SEA-DOO® SEASCOOTER™ when it is not in use and store separately in a well ventilated area where it is out of the reach of children and away from heat and ignition sources.
- Do not install the battery in your SEA-DOO® SEASCOOTER™ until immediately prior to using it.
- Before disconnecting/connecting any cables, open the nose cone and allow two minutes for any explosive gases to dissipate.
- Do not use/store/charge the battery in temperatures above 40°C (104°F) as excessive off gassing may occur. Keep the battery and SEA-DOO® SEASCOOTER™ in the shade when not in use.
- Always ensure the unit is dried thoroughly before opening the Nose Cone.
- Only use the charger supplied with the SEA-DOO® SEASCOOTER™ .

10

## Battery Use

### CAUTION

- The battery supplied with your SEA-DOO® SEASCOOTER™ releases a potentially explosive gas during charging. Charging should only take place in a well ventilated area, away from children and naked flames or other ignition sources (cigarettes, sparks). Never charge the battery whilst still in the SEA-DOO® SEASCOOTER™.
- Charge the battery as soon as possible after use within 24 hours.
- Always charge the battery to the fullest before using the SEA-DOO® SEASCOOTER™.
- Always remove the battery from the battery housing before charging.
- Always connect charger jack to the battery first and then plug charger into the mains.
- After charging, disconnect from the mains first and then disconnect the battery from the charger.
- After charging is complete the battery will continue to off gas. Wait at least 30 minutes after charging before removing the battery from the charger or placing the battery into the battery housing. Failure to do so could result in an explosion.
- Remove battery from charge once fully charged.

11

## Battery Use

### CAUTION

- Never charge the battery in sealed container.
- Never charge the battery near water.
- Never short circuit the battery or battery connectors.
- Always ensure the charger is dry before use.
- The charger gets quite warm in use - this is normal.
- If in doubt of the state of the battery, recharge it until the indicator on the battery charger indicates a full charge.
- If the battery is not to be used for an extended period, store it in a well ventilated area away from children, heat and ignition sources and recharge it every three months to maintain charge and avoid excess of gassing. DO NOT store the battery inside the SEA-DOO® SEASCOOTER™.
- If the battery appears damaged or will not charge fully, the battery must be replaced. If battery life is noticeably reduced, the battery should be replaced.

12

### ***Charging the battery***

For battery charging follow these instructions.

1. Always ensure that the Master Switch is Off - see figure 2.
2. Always ensure that the SEA-DOO® SEASCOOTER™ is out of the water, dry and placed in a dry area.
3. Give a half turn to the Latches and remove them from the Nose Cone as shown in figure 4.
4. Remove the Outer Nose Cone and Buoyancy Control Chamber.
5. Open the Vent by unscrewing the Vent Plug.
6. Remove the Inner Nose Cone. To do this, first feed the silicone ring (provided with this manual) through the latch holes in the Inner Nose Cone and hook over the hooks on the Battery Housing (see figure 6). Then screw the Pump Nozzle onto the Vent Hole and pump air into the Battery Chamber until the Inner Nose Cone pops off and then remove the silicone ring.
7. Allow two minutes for any gasses to dissipate.
8. Disconnect the battery cable from the housing cable (if not already disconnected - the cable will be disconnected when you buy your SEASCOOTER™) by pressing the locking feature, as shown in figure 7.

13

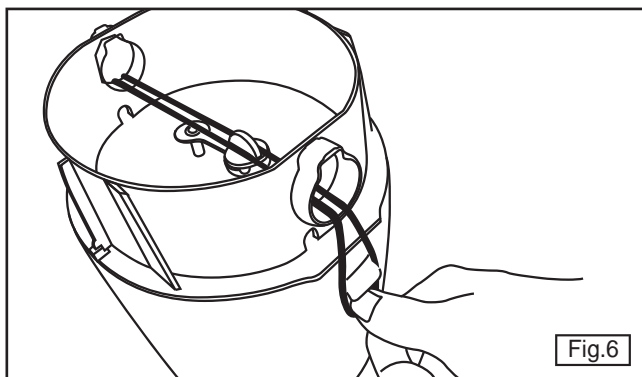


Fig.6

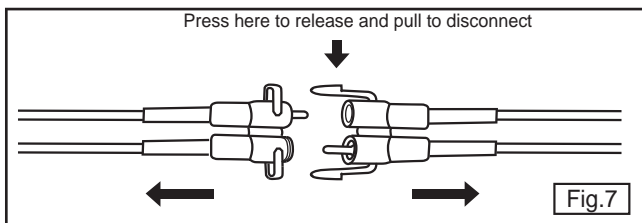


Fig.7

9. Remove the battery and place on a level surface.
10. Connect the battery cable to the charger cable.
11. Plug charger into mains, and turn on the supply.
12. Charging will take 14 to 16 hours for a fully discharged battery. Flashing light indicates battery is fully charged.
13. Unplug the adapter from the mains.
14. Allow battery to stand for 30 minutes before using it.
15. Unplug the battery cable from the Charger cable.
16. When ready for use, install the battery and reconnect to the housing cable.

14

17. Make sure the seals and sealing surfaces are clean and lubricated before replacing the Inner Nose Cone. See fig.8

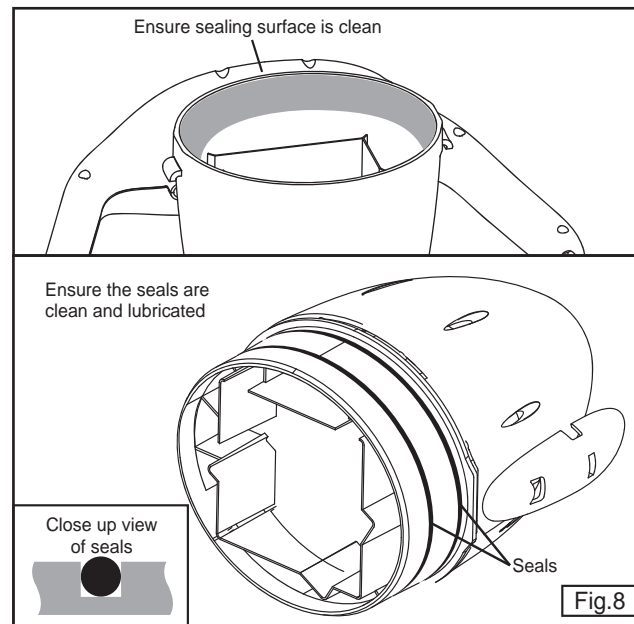





Fig.8

18. Replace the Inner Nose Cone making sure the key is aligned correctly. See fig. 9.
19. Ensure the Vent O Ring is fitted correctly. See fig. 10.
20. Screw in the Vent Plug to seal the vent.

15

21. Replace the Buoyancy Control Chamber.


22. Replace the Outer Nose Cone making sure the key is aligned correctly and insert the Latches and lock the Nose Cone by giving them a half turn. See fig.11.

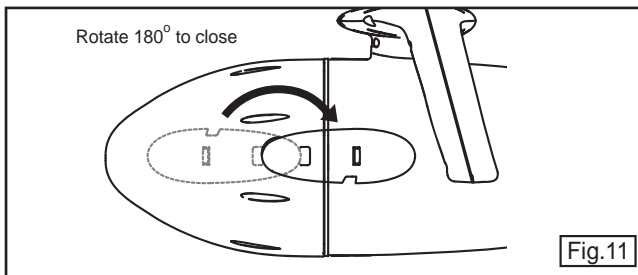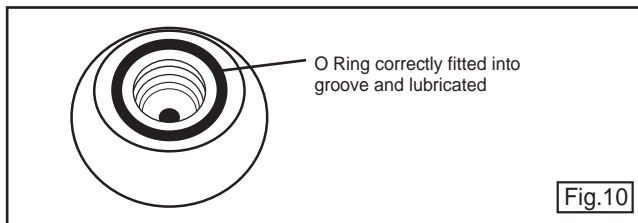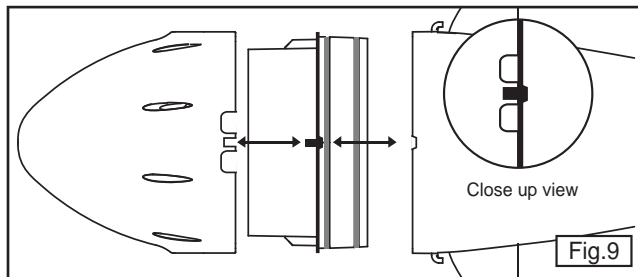

16

**To replace a flat battery with a fully charged battery.**

1. Follow the steps 1 to 7 on page 13, to open the SEASCOOTER™.
2. Unplug the battery at the socket by pressing the locking feature shown in figure 7.
3. Remove the flat battery. remove the cables from the flat battery and fix them to the charged battery.
4. Install and connect the charged battery in the correct position - the leads of the battery must be oriented as shown on the sticker on the battery, see figure 12.

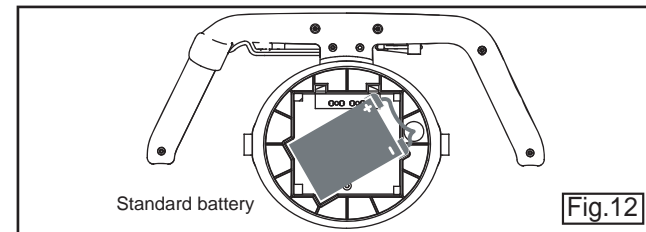


5. Follow steps 17 to 22 on page 15 and 16, to close the SEASCOOTER™.

17

## Care And Maintenance

### **Using the Optional Extended Life Battery.**

An optional extended life battery is available through your local customer service centre/distributor. This battery fits into the Battery Housing in a slightly different position to the normal battery, follow sticker on battery for correct orientation, see figure 13.

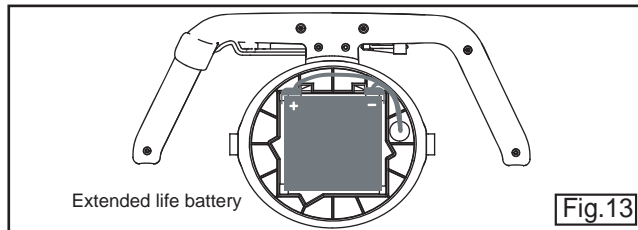

The extended battery can be charged in the same way as a standard battery.

#### **CAUTION**

Because this battery is heavier than a standard battery the Buoyancy Chamber must be added and empty to ensure the SEASCOOTER™ floats.

### **Buying batteries**

Additional standard or extended batteries can be purchased separately. Contact your local customer service centre/distributor to purchase them.

### **Battery Care**

- Please read and understand important Battery Use safety information on pages 9 to 12.
- The battery supplied with your SEASCOOTER™ should last about 200 cycles or two years before it should be replaced. Please contact your local customer service centre/distributor. Using a battery in excess of these recommendations can result in excessive of gassing of explosive gas.
- ALWAYS remove the battery from the SEASCOOTER™ immediately after use.
- **DO NOT STORE BATTERY IN SEASCOOTER™**

### **Care after using the SEASCOOTER™**

- Always rinse the SEASCOOTER™ in fresh water and allow it to dry before storage.
- Whenever possible rinse the SEASCOOTER™ in fresh water immediately after use.
- To clean the SEASCOOTER™ do not use detergents, only use a damp cloth to wipe the unit clean.
- The Battery Housing interior should be kept dry at all times.
- If the Battery Housing interior ever gets wet, see page 25, Accidental Flooding for procedure.

## Trouble Shooting

- When storing the SEASCOOTER™ for extended periods of time, open the Vent Plug in the Inner Nose Cone.
- DO NOT store battery in SEASCOOTER™.
- ALWAYS store your SEASCOOTER™ vertically when not in use to prevent deformation of the Propeller Nozzle.

20

### ***Unit does not function***

If the motor does not start when both triggers are pressed, make sure

1. The battery is properly connected
2. The battery is fully charged  
(see page 13, charging the battery)
3. The master switch is in the "On" position  
(see fig 2, page 6)
4. There is no water in the battery compartment  
(see page 25, accidental flooding)

### ***Blocked Propeller***

If the Propeller becomes blocked first try and remove the obstruction by removing the front grille. If this is not possible the back grille and Propeller can be removed.

Under normal use the grilles must not be removed.

Removing the front grille to remove an obstruction.

1. Remove the SEASCOOTER™ from the water.
2. Make sure the master switch is in the Off position.
3. Insert a screw driver as shown in figure 14 to remove the two grille pins.
4. Unclip grille as shown in figure 15.
5. Remove obstruction.
6. Reassemble grille and insert clips.

21

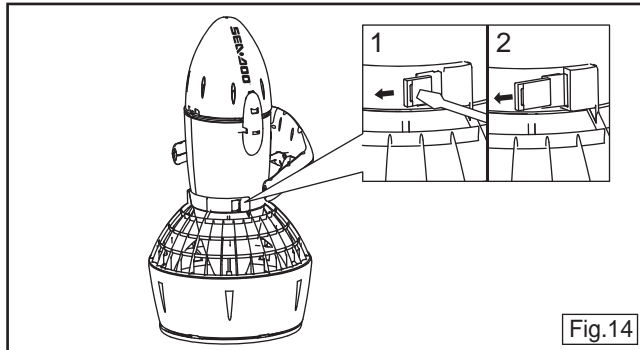


Fig.14

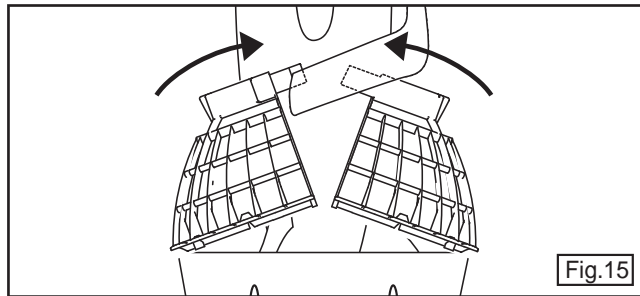


Fig.15

**Removing rear grille and Propeller to remove obstruction**

1. Remove the SEASCOOTER™ from the water.
2. Make sure the master switch is off.
3. Remove the battery - see page 13, step 1-9.
4. Unscrew the six rear grille screws as shown in figure 16.

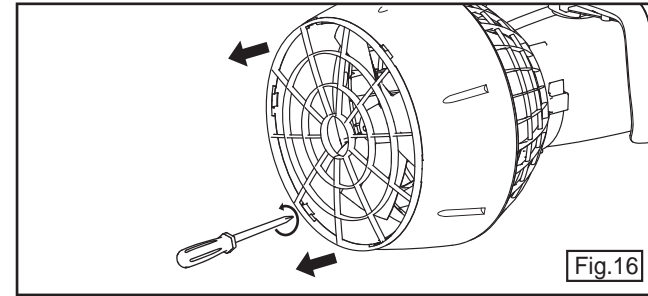


Fig.16

5. Whilst holding the Propeller, use an M6 socket to remove the nut from the Propeller shaft (See figure 17).


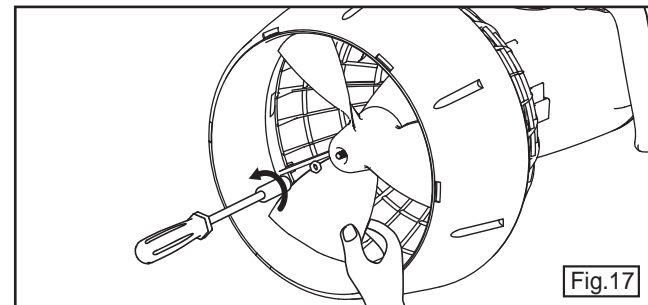


Fig.17


6. Slide the Propeller off the shaft, taking care not to lose the drive pin or washers.
7. Remove the blockage from the Propeller.
8. Replace the drive pin (if removed), see figure 18, and Propeller. Turn the Propeller slowly until you locate the pin and push the Propeller fully on.

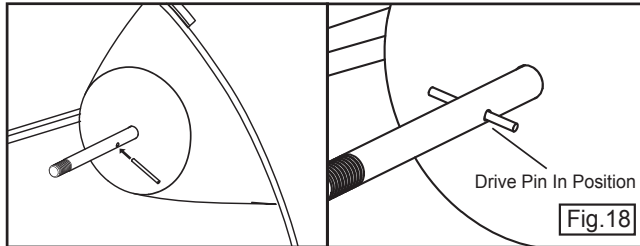

9. Replace the washer(s) and nut and tighten with the socket whilst holding the Propeller making sure it is securely fastened (See figure 19).

10. Replace the grille.

11. Replace the battery.

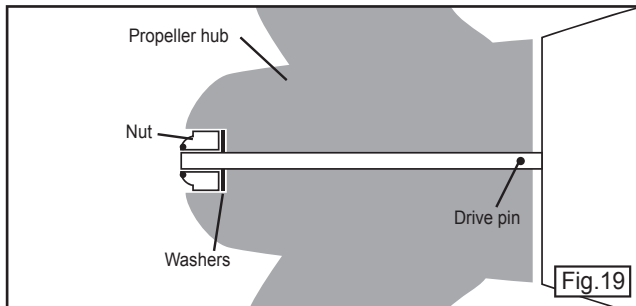

### **Sand or Grit on Seals**

Sand or grit is the enemy of seals. Correct maintenance and care is essential. To remove sand or grit from the seals, rinse the seals in fresh water and apply fresh lubricant. If there is sand inside the Battery Housing, gently brush the sand from the unit taking care not to scratch the sealing surfaces.

### **Accidental Flooding**

Be sure to keep the seals sand and grit free to ensure they keep water out and to close the vent plug after accessing the battery chamber. However, should the seals not be clean or the vent plug left open and water enter the battery chamber, your Seascooter will not be damaged as it is designed for protection against accidental flooding.

If water enters the battery chamber:

1. Remove the SEASCOOTER™ from the water if it is safe to do so. Always observe safe diving practice.
2. Remove nose cone and tip out excess water.
3. Wait two minutes for any gases to dissipate, then remove the battery.
4. If salt water has entered, rinse battery and battery housing with fresh water.
5. Dry housing and battery thoroughly.

## Technical Specifications

Unit Dimensions	24 x 15.2 x 12.3" (612 x 385 x 312 mm)
Unit Weight	13 lbs (6 kg) (with rechargeable battery)
Battery Type	1 x rechargeable battery
Battery Life	Approximately 1 hour
Depth rating	20m/65ft
Speed	Up to 2.0 mph (3.2 km/h)

**For more information on  
Sea-Doo® Seascooter™ Products**  
(Warranty, Customer Care / Maintenance,  
Parts & Battery Purchase)

PLEASE VISIT

[www.seadooseascooter.com](http://www.seadooseascooter.com)

Distributed by **Stallion (asia) LTD.**  
Block F, 6/F, Wah Hing Industrial Mansions  
36 Tai Yau Street, San Po Kong, Kowloon, Hong Kong

**Products covered by the following patents:**  
USA, Canada, EU, Australia, Japan, Hong Kong, China & Turkey  
US D471,506S / US D518,768S / D527,702S / US D506,176S / US D507,776S  
D512,678S / D519,911S / 6848385 B2 / US 7000559 B2 / US 7093554 B1 / 11/102,302  
0500577.8 / 0500578.0 / 0500579.2 / HK1072691 / ZL200530005661.5  
ZL200430079550.4 / ZL200430057359.X / ZL200530005662.X / ZL200530005663.4  
ZL200320103738.8 / ZL200520008894.5 / 1194933 / 1254107 / 1225250  
000330311-0001 / 000183900-0001 / 000183900-0002 / 000330279-0001  
000330295-0001 / 03020902.7 / 302949 / 302564 / 302563 / 302950  
302948 / 2005100230 / 200503474 / 29/268,724 / 11/595,675 / 000816376-0001

Toll Free: 1-877-2650996  
service@stallionsport.com  
[www.stallionsport.com](http://www.stallionsport.com)



SEA-DOO® and the BRP logo are trademarks  
of Bombardier Recreational Products Inc. or its affiliates,  
used under licence to Stallion (asia) Ltd.  
For more information on SEA-DOO® products visit [www.sea-doo.com](http://www.sea-doo.com)

**Stallion**  
P r o d u c t

Patented Print in China

This warranty does not cover any product that has been subject to misuse or negligence or accident, or that has been operated in any way contrary to the operating instructions as specified in the User Manual. This warranty does not apply to any damage to the product that is the result of improper maintenance or to any product that has been altered or modified so as to change its intended use. This warranty does not extend to repairs made necessary by normal wear or by the use of parts or accessories which are either incompatible with the product or adversely affects its operation, performance or durability.

In addition, this warranty does not cover items that experience normal wear and tear. ALL IMPLIED WARRANTIES ARE LIMITED IN THE DURATION TO THE WARRANTY PERIOD. AND SUCH IMPLIED WARRANTIES INCLUDING MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, ARE DISCLAIMED IN THEIR ENTIRETY AFTER THE EXPIRATION OF THE APPROPRIATE WARRANTY PERIOD. THE DISTRIBUTOR'S OBLIGATION UNDER THE WARRANTY IS STRICTLY AND EXCLUSIVELY LIMITED TO THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS AND RETURN OF THE PRODUCT TO THE CUSTOMER. THE DISTRIBUTOR DOES NOT ASSUME OR AUTHORIZE ANYONE TO ASSUME FOR THEM ANY OTHER OBLIGATION. THE DISTRIBUTOR ASSUMES NO RESPONSIBILITY FOR INCIDENTAL, CONSEQUENTIAL OR OTHER DAMAGES INCLUDING, BUT NOT LIMITED, TO EXPENSE OF RETURNING THE PRODUCT TO THE DISTRIBUTOR, LOSS OF USE OF PRODUCT AND LOSS OF TIME OR INCONVENIENCE.

#### **EXCLUSIONS**

BATTERY. This warranty does not include the battery.

#### **CUSTOMER ENQUIRIES**

If your unit is not operating, please refer to your User Manual before contacting our Customer Service Centre. For any damage or repair work required, please do not return your product to the store where it was purchased.

#### **RETURN / REPAIR POLICY**

Customers must call our Customer Service Centre and ask for a Return / Repair Authorization Number before sending the product to the Service Centre. Returned products must be shipped with original packaging including the polystyrene packing material and all defective parts. Please contact our Customer Service Centre for assistance in handling your case.

<b>UNITED STATES</b> SEA-DOO® SEASCOOTER™ CUSTOMER SERVICE CENTRE Phone No.: +1-800-361-2781 Email: warranty-usa@seadooseascooter.com
<b>CANADA</b> SEA-DOO® SEASCOOTER™ CUSTOMER SERVICE CENTRE Phone No.: +1-888-388-8837 Email: warranty-can@seadooseascooter.com
<b>WESTERN EUROPE</b> SEA-DOO® SEASCOOTER™ CUSTOMER SERVICE CENTRE Phone No.: +44 (0)1709 515157 Email: john@alphad.org
<b>EASTERN, SOUTHERN AND CENTRAL EUROPE</b> SEA-DOO® SEASCOOTER™ CUSTOMER SERVICE CENTRE Phone No.: +386 5616 50 20 Email: service@kernsport.com
<b>HONG KONG</b> SEA-DOO® SEASCOOTER™ CUSTOMER SERVICE CENTRE Phone No.: +852 3516 2388 Email: service@stallionasia.com

**(For other territories, please visit [www.seadooseascooter.com](http://www.seadooseascooter.com) and contact your local distributor)**

#### **RETURN / REPAIR PROCEDURE**

1. Call the Customer Service Centre for your Return / Repair Authorization Number.
  2. Make a copy of your Proof of Purchase (receipt).
  3. Pack the defective unit in its original packaging including the polystyrene foam and include the unit and all defective parts.
  4. Attach the copy of your Proof of Purchase (receipt) to the outside of the box (clearly visible), together with the Return / Repair Authorization Number.
  5. Ship the package to the Service Centre.
- PLEASE NOTE:** Deliveries that do not have the Proof of Purchase (receipt) and Return / Repair Authorization Number attached clearly to the outside of the box, will not be accepted by the Service Centre.

**For any questions or queries you may have regarding your SEA-DOO® SEASCOOTER™, please follow the below steps for easy and fast resolution:**

#### **- STEP 1-**

Please read your User Manual. For a copy of the User Manuals, please visit [www.seadooseascooter.com](http://www.seadooseascooter.com)

#### **- STEP 2-**

Go to [www.seadooseascooter.com](http://www.seadooseascooter.com) and see our FAQ section to find instant answers.

#### **- STEP 3-**

Contact one of our Customer Service representatives at the Customer Service Centre in your region.